



User Manual

Talon
IR™

Talon™
3.0MP

Extreme™
5.0MP

All Digital
Pro Scouting Camera

Introduction

Congratulations on the purchase of your new Recon Outdoors Digital Scouting Camera System manufactured and distributed by Recon Outdoors. For best results, please read the entire owner's manual to gain an understanding of all of the available benefits and features of the Recon Digital Scouting Camera. This manual provides you with operational information for both the Talon™ and Extreme™ cameras as well as associated accessories.

Trademarks Used

All parts of the Recon documentation are protected by copyright law and all rights are reserved. This documentation may not, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine readable form without prior consent, in writing, from Recon Outdoors.

Talon™ is a trademark of Recon Outdoors

Product names mentioned herein are for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Limited Warranty

There is a full one year warranty from the date of purchase on defects in materials and workmanship. The laser unit has a 30 day warranty from the date of purchase.

Definitions of Notices, Cautions and Notes

NOTICES:

A *NOTICE* indicates either potential damage to camera or loss of data and tells you how to avoid the problem.

CAUTIONS:

A *CAUTION* indicates a potential for camera or accessory damage.

NOTES:

A *NOTE* indicates important information that helps you make better use of your Recon Camera.

Notices, Cautions and Notes

NOTICE:

Recon Outdoors shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. All information, specifications and hardware associated with the camera are subject to change without notice or obligation on the part of Recon Outdoors.

CAUTION:

(Busy LED) Avoid turning camera off while busy LED is on. LED is on during image/movie capture and storage functions. If busy LED is on for longer than 60-seconds then turn camera off, wait three seconds and turn camera back on.

CAUTION:

(Compact Flash Card) The compact flash card should only be removed while the Mode Switch is in the OFF position. Do not remove the flash card while the keypad "BUSY" LED is on, this may corrupt the flash card.

NOTE:

(Compact Flash Card) The CF card must be formatted in FAT. When formatting cards on the computer it is very important not to use FAT32 format. The Flash card will not work in camera under FAT32 formatting. Be sure not to select the Quick Format option.

CAUTION:

(Battery Installation) Improper installation of batteries may result in damage to the camera. Replace the batteries only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions. Recommend Duracell batteries.

CAUTION:

(LASER) Never look directly in to the laser. It could cause injury to your eyes.

Table of Contents

1. Talon IR, Talon 3.0 and Extreme 5.0 Features	1
2. Quick Start Instructions	3
Fielding the Camera (Run Mode)	3
Retrieving the Camera (Setup Mode)	3
3. Programming Your Scouting Camera	5
Power/Mode Switch	5
Keypad and Text Display	5
Laser Button	6
4. Setup Menus	7
Set Time Menu	7
Set Date Menu	8
Set ID Menu	8
5. Camera Settings	9
Status Menu	9
Capture Menu	9
Delete Menu	9
Mode Menu and Flash Card Capacity	9
Internal Memory	10
Time Delay Menu	10
Motion Menu	11
Walk Test	12
6. Using the Recon Camera – Field Setup	13
Direction of Camera	13
Above Ground Height	13
Distance from Target	13
Use on Trail	13
7. Viewing Images or Movies	14
Video Playback Menu	14
Removable Compact Flash™ Memory Card	14
Formatting Memory Card	14
Video Port	15
Field Viewing	15
8. Problem Solving	16
Error Condition	16
Frequently Asked Questions (FAQ)	16
Contacting Recon Outdoors	17
Warranty	18
Accessories	18
9. Tables and Figures	
Figure 1 – External View	4
Figure 2 – Internal View	4
Figure 3 – Keypad and LCD Display	6
Table 1 – Military Time Table	7
Table 2 – Typical Storage Capacities	10

1 Talon™ and Extreme 5.0™ Features

Talon IR™, Talon 3.0™ and Extreme 5.0™ lead the industry as the most technologically advanced Scouting Cameras on the market. These full-featured, all-digital Scouting Cameras have unrivaled performance and flexibility. The 1.3 and the 3.0 Mega Pixel lens captures high-quality black & white pictures and movies day and night (Extreme 5.0 Mega Pixel lens captures high-quality color pictures and movies by day and black and white pictures and movies by night). The Covert Infrared Illuminator allows you to capture multiple pictures of the same animals without spooking them! "No Flash - No Dash™". Camera does not disturb the wildlife feeding and mating habits.

Summary of Talon™ features

- High Resolution 1.3 and 3.0 Mega Pixel Panoramic lens
- Invisible Infrared Illuminator* "No Flash – No Dash™"
- Records Pictures and Movies
- Programmable Event Delay
- Built-In Laser Beam Module for Picture Perfect Aiming
- Walk-Test LED
- Passive Infrared Motion Detector
(Triggers the camera based on heat and movement)
- Overlay data stamped on each Image
(Customer Name/Moon Phase/Temperature/Time/Date)
- Video Port (View Images in the Field)
- Removable Compact Flash™ Memory Card
(No More 35mm Film Processing)
- Optional accessories include High-Security Lock-Box, TV/USB Card Readers, and 5" Black and White TV

Summary of Extreme™ Features

- High Resolution 5.0 Mega Pixel Panoramic lens
- Invisible Infrared Illuminator* "No Flash – No Dash™"
- Records Color Day Pictures and Movies
- Records Black and White Night Pictures and Movies
- Programmable Event Delay
- Built-In Laser Beam Module for Picture Perfect Aiming
- Walk-Test LED
- Passive Infrared Motion Detector
(Triggers the camera based on heat and movement)

- Overlay data stamped on each Image
(Customer Name/Moon Phase/Temperature/Time/Date)
- Video Port (View Images in the Field)
- Removable Compact Flash™ Memory Card
(No More 35mm Film Processing)
- Optional accessories include High-Security Lock-Box, TV/USB Card Readers, and 5" Black and White TV

Setup is a snap with Recon's sealed five-button user friendly keypad and two-line text display. No computers required to change time, date and camera settings. A series of simple and easy to use menus allow you to setup and maintain your Recon™ camera. These menus include set time, set date, set motion sensor sensitivity, set delay and set mode (picture or movie). These settings are stored and remain in effect even when the power is turned off or when the batteries are removed. These settings can be modified over and over as required for each scouting trip.

The cameras store thousands of images on industry standard Compact Flash™ memory cards. Load pictures into your computer using optional card readers. E-mail and print your digital images. View the images at the site with built-in video output port (portable viewer not included). Camera also Interfaces with a standard TV and VCR. Reliable motion detection with programmable sensitivity eliminates false triggers. Camera attaches to the tree with supplied strap or with optional Lock-Box (see accessories list).

*Infrared Flash is invisible compared to Bright White Flashes of Color Scouting Cameras. Internal power management allows the camera to sleep between events, drawing only MICRO-Amps of current allowing the six D-cell batteries to have an extended life from hours to as much as one full hunting season. Once motion is detected, the camera wakes up, takes a picture and then goes back to sleep. Each picture is tagged with customer name, moon phase, temperature, date and time, so that you will be able to analyze not only the type of game that you are monitoring but also the time patterns associated with the game. Motion is detected at distances of up to 40 feet, thus ensuring the maximum coverage of your game scouting area.

Recon cameras use a PIR (Passive Infrared Receiver) or motion detector to detect motion in front of the camera. The PIR senses targets day or night, and has been carefully designed to work over a wide range of temperatures while eliminating virtually all false target detections in the scouting area. Once the camera is alerted by the PIR that a target is in view, the PIR will wake up the camera and take a picture. It won't take another picture until the time on the time delay setting has been exceeded.

2 Quick Start Instructions

Fielding the Camera (Run Mode)

- Step 1: Install Six D-Cell Alkaline Batteries. (Recommend Duracell™)
- Step 2: Install Compact Flash Card: With the power switch in the off position, install the compact flash memory card with the label on top and pointed to the right. The compact flash must be properly installed in order for the camera to operate. Never force the memory card into the slot.
- Step 3: Place camera in setup mode using the toggle switch.
- Step 4: Observe messages on LCD display (version/time/date/etc).
- Step 5: Perform walk-test.
- Step 6: Turn camera off and wait 3-seconds.
- Step 7: Turn camera to run mode using the toggle switch.
- Step 8: Observe the status messages on the LCD. This is followed by the count-down blinking of the green LED located behind the PIR lens. There will be approximately 1-minute to close the unit and leave the area.



Retrieving the Camera (Setup Mode)

- Step 1: When returning to the scouting area, open the camera and wait for the busy LED to go off. Turn the camera off using the toggle switch. Wait 3-seconds before entering setup mode.

NOTE:

(Compact Flash Card) The compact flash card should only be removed while the Mode Switch in the OFF position. Do not remove the flash card while the keypad "BUSY" LED is on, this may corrupt the flash card.

- Step 2: Turn the camera to the setup mode. One of the display messages will indicate the number of stored pictures. View the images using the video port.
- Step 3: Turn the camera off when finished.

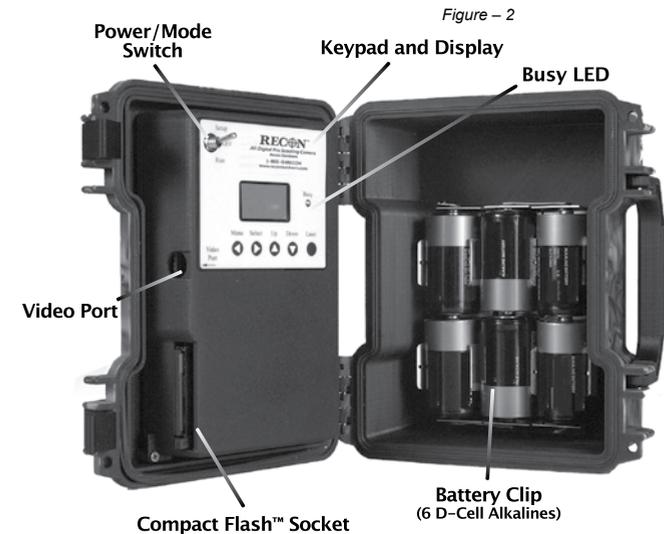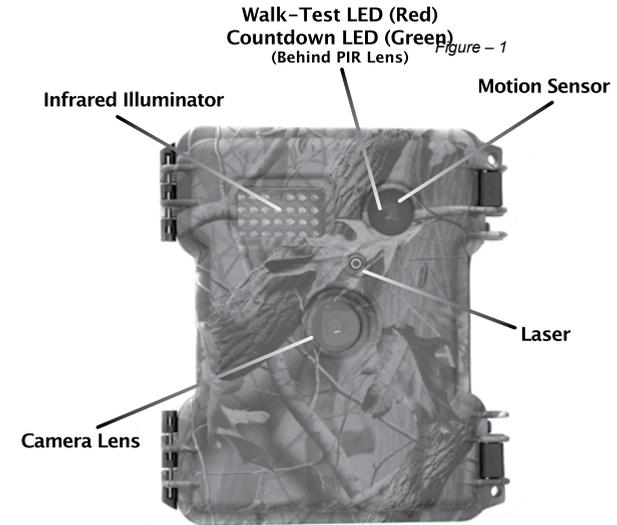

External and Internal Views - Figure 1-2

3 Programming and Using Your Camera

Power/Mode Switch

Use the mode toggle switch to select between Setup/Off/Run. Push the toggle switch to the up position to select setup mode, down to select run mode, and center for off.

Setup mode is used by the Recon camera for the walk-test, laser pointing, video playback, memory card delete functions, and other functions such as changing date, time and ID.

Place the camera into the run mode prior to leaving the field. There is a built in 1-minute delay between the time that the run mode switch is activated and the time the camera is activated. This allows you time to close and secure the camera before it becomes active and ready to take a picture. The green LED will double blink during this 1-minute countdown.

Place the mode switch in the "off" position to preserve batteries when the camera is not being used.

CAUTION:

(Compact Flash Card) The compact flash card should only be removed while the Mode Switch is in the OFF position. Do not remove the flash card while the keypad "BUSY" LED is on, this may corrupt the flash card.

CAUTION:

(Battery Installation) Improper installation of batteries may result in damage to the camera. Replace the batteries only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions. Recommend Duracell batteries.

Keypad and Text Display

Setup is a snap using Recon's user-friendly keypad and text display. A series of simple and easy to use menus allow you to setup and maintain your Recon™ camera.

Laser Button

The laser is toggled on and off by pressing the "LASER" button/key. The laser is helpful in marking the center of the PIR (Passive Infrared Receiver) or motion detector zone that triggers the camera system. It also indicates the center of the picture area to be taken. Remember, the mode switch must be in the setup position for the laser to be activated. With the camera system securely attached, open the door of the system, wait for the camera to complete its startup messages, then turn the laser on. If the laser is working, this will confirm that the batteries are properly installed and working. Next, close the camera system door, and use the laser to sight in the camera system ensuring that laser beam is parallel to the ground and points to the place where the game animal is expected to have its picture taken. Once this is done, open the camera system door and turn the laser off. The laser should not be left on for more than a few minutes at a time.



NOTE:


The laser is automatically shut-off when the camera system is moved into the run mode.

NOTE:

The laser is disabled in the manual capture menu.

NOTE:

The laser is disabled each time you enter a menu (example: Set Time/Set Date).

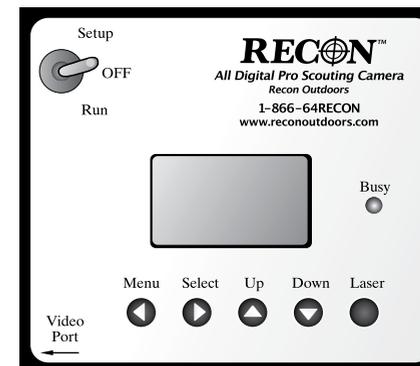

Keypad and LCD Display - Figure 3

4 Setup Menus

Use the "MENU" key to cycle through the available menus. Use the "SELECT" key to enter the menu. When you are ready to exit the menu, press the "MENU" key.

When the camera is first turned on, a series of status messages are displayed. They include software version number, current time, and current date. These settings can be changed by scrolling to the appropriate menu.

NOTE:
The camera remembers your camera settings even when the batteries have been removed. Your settings are maintained until you change them.

Set Time Menu

Press the "MENU" key until the set time menu appears on the display. Press the "SELECT" key to enter the menu. Use the "UP" and "DOWN" keys to increment and decrement the hour and minute fields. Use the "SELECT" key to change between hours and minutes. Remember that the time is maintained in military notation (see table-1).

Press the "MENU" key to exit the menu. This will save your time setting.

 MILITARY	 CIVILIAN	 MILITARY	 CIVILIAN
1:00	1:00 AM	13:00	1:00 PM
2:00	2:00 AM	14:00	2:00 PM
3:00	3:00 AM	15:00	3:00 PM
4:00	4:00 AM	16:00	4:00 PM
5:00	5:00 AM	17:00	5:00 PM
6:00	6:00 AM	18:00	6:00 PM
7:00	7:00 AM	19:00	7:00 PM
8:00	8:00 AM	20:00	8:00 PM
9:00	9:00 AM	21:00	9:00 PM
10:00	10:00 AM	22:00	10:00 PM
11:00	11:00 AM	23:00	11:00 PM
12:00	12:00 AM	0:00	12:00 PM

Military Time Table - Table 1

Set Date Menu

Press the "MENU" key until the set date menu appears on the display. Press the "SELECT" key to enter the menu. Use the "UP" and "DOWN" keys to increment and decrement the month, day, and year fields. Use the "SELECT" key to change between months, days, and years.

Press the "MENU" key to exit the menu. This will save your date setting.

Set ID Menu

Press the "MENU" key until the set ID menu appears on the display. Press the "SELECT" key to enter the menu. Use this menu to enter your name or some other descriptive identifier such as location. These characters are stamped in the lower left corner of each image.

Press the "MENU" key to exit the menu.

NOTE:
Remember, the camera retains the ID setting when it is powered off and even when the batteries are removed.

5 Camera Settings

Status Menu

The status menu is used to examine the battery voltage, temperature and image count (# images stored on the Compact Flash™ card).

Press the “MENU” key until the status menu appears on the display. Press the “SELECT” key to enter the menu. Use the “UP” and “DOWN” keys to increment through the available status fields.

Press the “MENU” key to exit the menu.

Capture Menu

Press the “MENU” key until the capture menu appears on the display. Press the “SELECT” key to enter the menu. Use the “SELECT” key to manually snap pictures. The busy LED on the keypad will stay on during capture and during the storage of the image or movie to the Compact Flash™ card.

Press the “MENU” key to exit the menu.

WARNING:

Do not insert or remove the compact flash memory card unless the mode switch is in the off position. Also, do not remove the flash memory card while the keypad “busy” LED is on.

Delete Menu

Press the “MENU” key until the delete menu appears on the display. Press the “SELECT” key to enter the menu. Use the “UP” and “DOWN” keys to change between “Yes” and “No”. Use the “SELECT” key to start the delete function. The busy LED will be on during delete.

WARNING:

Do not turn the camera off or remove memory card until the delete function is finished (this will corrupt the card).

Mode Menu and Flash Card Capacity

Use this menu to choose between picture mode, high-resolution movie mode, and low-resolution movie mode. Picture mode is the only mode that stores the date/time/moon phase/temperature/customer name. The movie modes do not have this capability. High-resolution movies are recorded with 640x480 resolutions at a frame

rate of 1.5 seconds for 60 seconds. Low-resolution movies are recorded with 320x240 resolutions at a frame rate of 1 second for 45 seconds. The movie feature provides spectacular time lapsed movie action, Day and Night! Table-2 gives approximate storage capacities for various Compact Flash™ card sizes.

CF Card Size	Pictures	Movie HighRes	Movie LowRes
256 MB	1100	250	250
512 MB	2500	500	500
1 GB	5000	1000	1000

Typical Storage Capacities - Table 2

Press the “MENU” key until the mode menu appears on the display. Press the “SELECT” key to enter the menu. Use the “UP” and “DOWN” keys to change between the available modes.

Press the “MENU” key to exit the menu. This will save your mode setting.

NOTE:

The camera remembers the mode settings even when the batteries have been removed. Your settings are maintained until you change them.

Internal Memory

Recon cameras have a built-in memory chip that is used to store images when a Compact Flash Card is not installed. The memory chip will store up to 25 images. These images are automatically transferred to a CF card the next time the camera enters setup mode with a CF card installed.

Time Delay Menu

Press the “MENU” key until the delay menu appears on the display. Press the “SELECT” key to enter the menu. Use the “UP” and “DOWN” keys to change between the available delay settings.

This setting determines the minimum time between pictures. Choose one of five available settings: 30-second, 1-minute, 5-minute, 10-minute, or 60-minute settings. Press the “MENU” key to exit the menu.

NOTE:

The camera retains the delay setting when the camera is powered off or even when the batteries have been removed. Longer delay settings may cause some action to be missed.

Motion Menu

Press the "MENU" key until the motion menu appears on the display. Press the "SELECT" key to enter the menu. Use the "UP" and "DOWN" keys to change between the available DISTANCE setting (Short, Medium and Long). Once the desired DISTANCE setting has been selected, press the "MENU" key to exit the menu.

For best results leave the "MOTION" setting on "Long" all year round. "Long" is the most sensitive and longest distance detecting mode. If you have a desire to shorten the distance of detection use the "Medium" or "Short" setting.

Example: If at a given temperature the "Long" setting detects at 30ft then "Medium" will detect at about 18ft and "Short" will detect at about 12ft.

NOTE:

The camera remembers the mode settings even when it is powered off and even when the batteries have been removed. Your settings are retained until you change them.

In order to have the best chance of getting good pictures and no "false triggers", you should consider doing the following:

- Select the "Long" Distance setting (PIR).
- Select a site that ideally has the deer about 25 feet from the camera.
- Select a site that has very few leaves in the field of view to avoid potential "false triggers".
- Set the camera up so it is looking away from the sun. This minimizes glare on the lens and ensures the best lighting on the target.
- Understand the use of the laser and how you aim the camera for best results. You would like for the PIR and camera to point at the center body mass of the game animal. A suggestion would be to put a stick in the ground about where you expect the game animal to be. Turn the laser on, and then point the camera so that the laser hits the stick at the proper height above the ground. You can use an object to wedge the camera up or down to obtain the proper height. Remember, the PIR beam width is about 2 feet wide and 1 foot high at a distance of 25 feet from the camera.

Walk-Test

The Recon camera comes equipped with a WALK-TEST which is only active when the switch is in Setup. A red LED, located behind the round motion lens in the upper right corner, will flash when the motion circuit detects a moving heat source. This will allow you to determine the left and right edges of motion activation. The WALK-TEST in conjunction with the LASER, which gives you your UP and DOWN alignment, will pin point exactly where your picture will be taken. It is important to know that the Motion Circuit or PIR, Passive Infrared Receiver, is like a flashlight beam. It is about 2 feet wide and 1 foot high at 25 feet.

6 Using The Recon Camera - Field Setup

Direction for the Recon Camera

The camera should always point away from the sun, if possible. This will give the best lighting on the target and prevent glare from getting into the camera lens. If you are not able to do this, try not to point it directly into the sun. The imager can be damaged by pointing directly at the sun, and the images will appear to be washed out. Keep in mind, the changing angle of the sun could cause camera to malfunction.

Above Ground Height

The camera should be about the height of a deer or about two and one half feet above the ground. You will also have the best results if the ground is level and the camera is pointing parallel to the ground. This will give the best range and the most coverage of the terrain. The best results will occur if you place the camera on a trail or rub that shows signs of recently being used. The less you disturb the site, the better your results will be for attracting older and larger game animals.

Distance from Target

For best results, try to place the camera so that the game animal will be 20 to 30 feet from the camera when the picture is taken. This will ensure that there is enough light and that you will get a full picture of the game animal. The PIR will reliably detect the game animal and there should be plenty of pixels and light on the target so that the antlers are easy to see. Images taken at 50 feet will have less detail and illumination. The use of food / bait on active trails or rubs can help position game animals at the desired distances from the camera.
(Use food/bait only where permitted)

Use on Trail

For best results place the camera so it is aimed down the trail not across it. This will allow the camera more time to take a picture of the animal or target.

7 Viewing Images and Movies

Video Playback Menu

Press the "MENU" key until the video menu appears on the display. Press the "SELECT" key to enter the video playback menu. Use the "Select" key to choose either still or movie playback. Use the "UP" and "Down" keys to cycle through the available images or movies. Each time the keys are pressed, the next available image is retrieved from the flash card and fed to the video port.

The display will indicate the current image number to be viewed on the video port. Connect the camera to your TV or VCR using the supplied video cable. Portable/ hand-held TV devices can be used to view images at the tree. Press the "MENU" key to exit the menu.

Removable Compact Flash™ Memory Card

The Recon camera uses industry standard Compact Flash™ memory cards. Currently, Recon Outdoors can supply 256MB, 512MB and 1GB cards. Before you can format a memory card, you must have a compact flash reader for your computer.

NOTE:

Recon Outdoors recommends Sandisk brand Compact Flash Cards.

Formatting Memory Card

- Step 1: Load the memory card in the computer Compact Flash Card reader. Be sure that the memory card is properly loaded.
- Step 2: Click on "Start".
- Step 3: Scroll down to "Programs".
- Step 4: Click on "Windows Explorer".
- Step 5: Scroll down to removable disk and left click and then right click.
- Step 6: Select the format option.
- Step 7: Select FAT (NOT FAT32) format from menu and click on "start".

DO NOT SELECT "QUICK FORMAT" FUNCTION AS THIS FORMAT MAY CAUSE PROBLEMS.

WARNING:

Verify that you have selected the Removable Compact Flash Drive (reader). Take care not to accidentally select the wrong drive!!! Verify that the size of the drive closely matches the size of the Compact Flash Card being formatted.

Step 8: Click on "yes".
Step 9: Click on "done".

WARNING:

Do not remove compact flash card until formatting has finished. This process can take up to 2 minutes.

Video Port

The Video port connects the camera to conventional TVs and VCR recorders. Playback images and movies on your TV or record them on your VCR recorder. The supplied cable provides a standard RS170 composite video signal output to an RCA plug. Use the Up/Down switch to sequence through the captured images and movies. The video port is only active in the setup mode, be sure that the toggle switch is in the setup position. Images through the video port are viewed in low resolution (320x240). View full resolution using the computer and TV card readers.

NOTE:

Video port will take about 10 seconds to load images.

Field Viewing

Use a portable, battery operated TV with video input or a VCR camera with video input to view images and movies at the tree. Simply connect to the camera video port with the toggle switch in the Setup mode and use the Up/Down switch to sequence through the captured images and movies.

8 Problem Solving

Error 0001

Green and red continuously blinking LEDs indicate a problem initializing the Compact Flash™ Interface. To resolve the problem, try the following:

- Install another Compact Flash™ Memory Card.
- Use the USB Card Reader to Re-Format the Compact Flash™ Memory Card.
- Check Compact Flash™ Memory Card to ensure that it is properly installed.
If the Compact Flash™ Memory Card is not properly inserted into the camera, the green and red LEDs will continue to blink and, the camera will not go into the setup mode or the run mode.
- Check for bent pins on the camera card socket

Frequently Asked Questions (FAQ)

My Recon camera is stuck on "RECON OUTDOORS" and the Busy light stays on. Why?

Check for Flash Card incompatibility. Make sure Mode on/off switch is in the OFF position then remove Compact Flash Card from card holder. Flip Mode switch to Setup, the LCD should scroll thru the Menu screens to Video Menu. If this occurs then there is a problem with the Compact Flash Card. Recon Outdoors recommends Sandisk brand Compact Flash Cards. If problem continues call Recon tech support.

How many pictures will my Recon camera take on a set of batteries?

You can take approximately 800 to 2,000 pictures depending on the temperature and number of night pictures.

I am not getting as many pictures as I think I should. Why?

Check the MOTION setting: make sure it is set to the LONG DISTANCE setting. Use the Laser to check the aim point of the camera; it may be set too high or too low. You want to aim for the center body mass of the target. For optimum performance make sure the camera is 20 to 25 feet from where you expect your target to be.

Why does my Recon camera have pictures where the object is too bright?

The Recon camera is designed to have one of the longest flash ranges in the business, 40 feet +. If you are set up for pictures at less than 20 feet, you can use electrical tape to mask off the bottom half of the IR LEDs located in the upper left hand corner. For optimum performance make sure the camera is 20 to 25 feet from where you expect the target to be.


I live in a cold climate and batteries do not last. Do you have any suggestions?

Recon Outdoors makes an Extreme Weather kit that utilizes an external 12 volt gel cell battery that works in extreme heat or cold. For more information contact Recon Outdoors at 866-647-3266.

Limited Warranty

There is a full one year warranty from the date of purchase on defects in materials and workmanship. The laser unit has a 30-day warranty from the date of purchase.

Optional Accessories

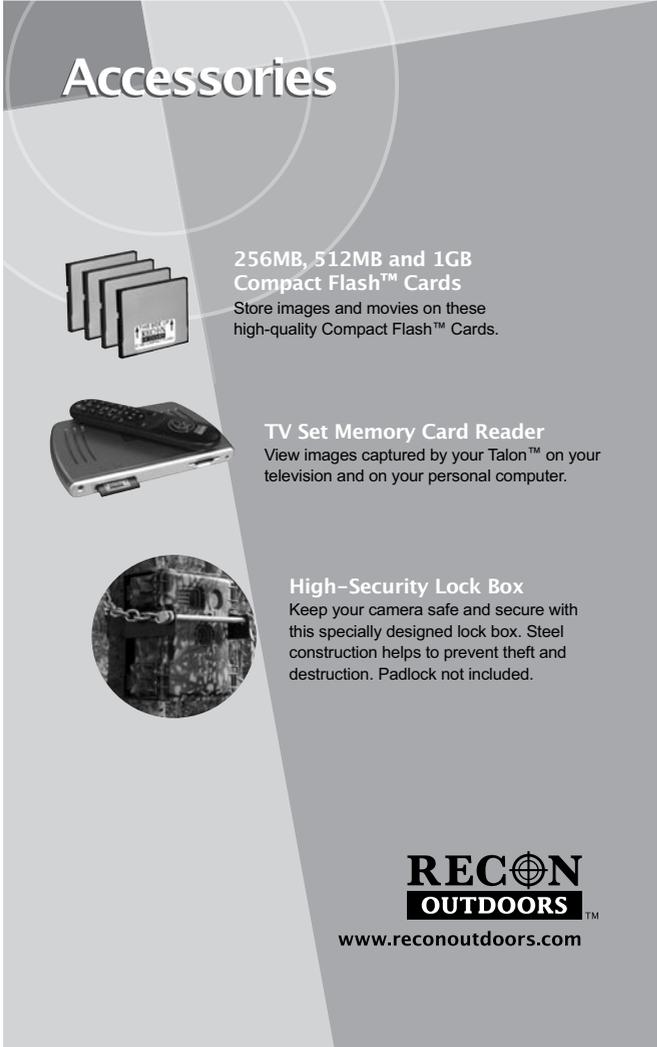

The graphic is a vertical rectangular panel with a light gray background and a dark gray diagonal stripe running from the top-left to the bottom-right. At the top, the word "Accessories" is written in a large, white, sans-serif font. Below this, there are three rows of product information. Each row consists of a small image on the left and a text block on the right. The first row shows three Compact Flash cards. The second row shows a TV set memory card reader. The third row shows a high-security lock box. At the bottom right of the panel, the Recon Outdoors logo is displayed, featuring the word "RECON" in a bold, sans-serif font with a target symbol over the "O", and "OUTDOORS" in a smaller font below it. Below the logo is the website address "www.reconoutdoors.com".

Accessories

 256MB, 512MB and 1GB Compact Flash™ Cards
Store images and movies on these high-quality Compact Flash™ Cards.

 TV Set Memory Card Reader
View images captured by your Talon™ on your television and on your personal computer.

 High-Security Lock Box
Keep your camera safe and secure with this specially designed lock box. Steel construction helps to prevent theft and destruction. Padlock not included.

RECON
OUTDOORS™
www.reconoutdoors.com

Sample Photos







RECON
OUTDOORS™

906 Bob Wallace Ave., Suite F
Huntsville, AL 35801

866-647-3266
www.reconoutdoors.com